



SINGLE RUNWAY AIRPORT OPERATIONS

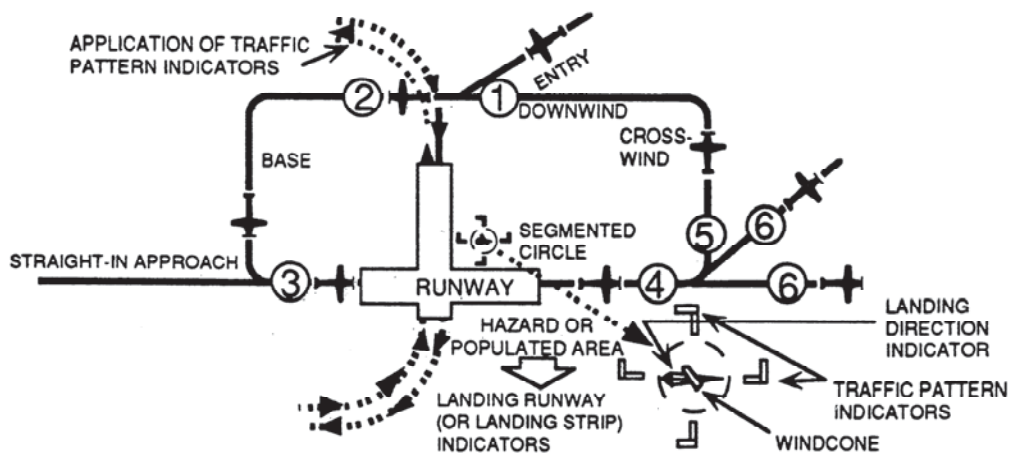

PARALLEL RUNWAYS

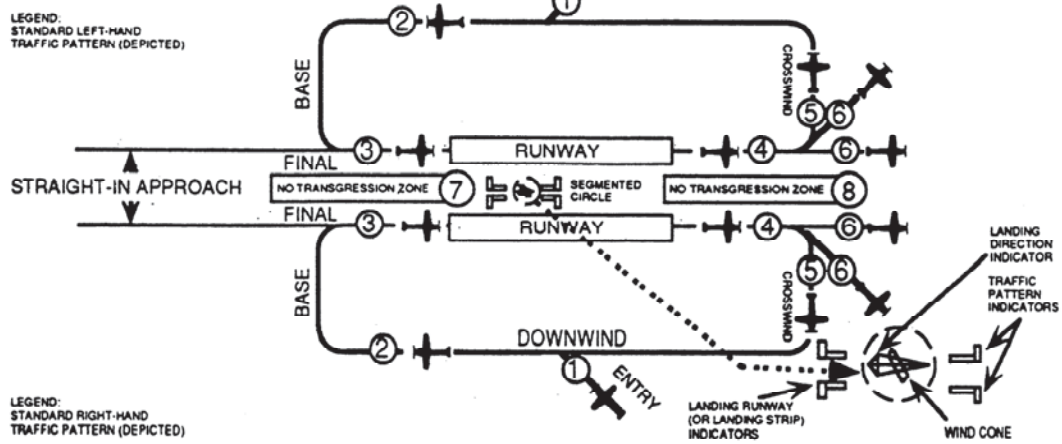

KEY

- ① Enter pattern in level flight, abeam the midpoint of the runway, at pattern altitude. (1000' AGL is recommended pattern altitude unless established otherwise).
- ② Maintain pattern altitude until abeam approach end of the landing runway, or downwind leg.
- ③ Complete turn to final at least 1/4 mile from the runway.
- ④ Continue straight ahead until beyond departure end of runway.
- ⑤ If remaining in the traffic pattern, commence turn to crosswind leg beyond the departure end of the runway, within 300 feet of pattern altitude.
- ⑥ If departing the traffic pattern, continue straight out, or exit with a 45° left turn beyond the departure end of the runway, after reaching pattern altitude.
- ⑦ Do not overshoot final or continue on a track which will penetrate the final approach of the parallel runway.
- ⑧ Do not continue on a track which will penetrate the departure path of the parallel runway.